

Communication Unit for CC-Link SC-GU3-01

CMJE-SCGU301 No.0024-31V


For details of the communication commands etc. of the communication unit for CC-Link **SC-GU3-01**, refer to "Product Specification" or "Communication Command Specification."

1 CE MARKED PRODUCT

- The models listed under "SPECIFICATIONS" come with CE Marking. As for all other models, please contact our office.


2 OUTLINE

- Communication unit **SC-GU3-01** can output the output signal (in case of 2-output type, only the output 1) of a sensor amplifier (NPN output type) that is connectable to cascading connector unit **SC-71** (optional), as the communication data of CC-Link.
- SC-GU3-01** enables to connect max. 16 units of sensor amplifier (**FX-300** series or **LS-400** series, etc.). In case of **FX-500** series, max. 12 units of sensor amplifier can be connected.
- This product can output all the output signals of the connected sensor amplifiers to PLC (Programmable Logic Controller) etc. in one time.
- By using end unit **SC-GU3-EU**, settings and control of the connected optically communicable sensor amplifier (**FX-500** series, **LS-403** or **DPS-400** series) can be done.

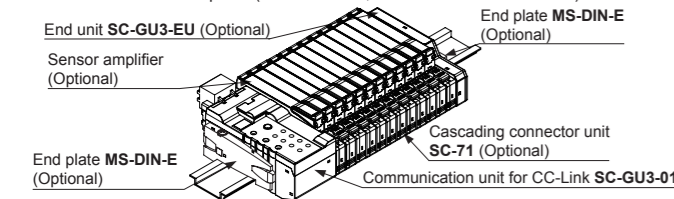

3 FUNCTIONAL DESCRIPTION

Communication unit for CC-Link SC-GU3-01

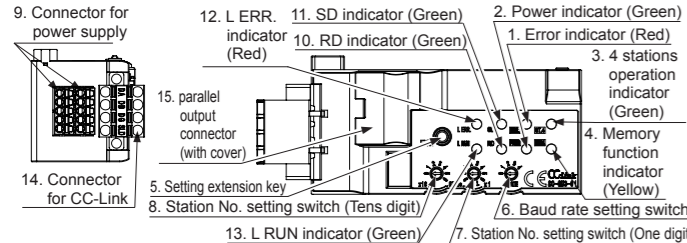

End unit SC-GU3-EU



Designation	Function												
1 Error indicator (Red)	Lights up when a communication halt occurs in CC-Link. Blinks when an optical communication error occurs.												
2 Power indicator (Green)	Lights up when power is ON.												
3 4 stations operation indicator (Green)	Lights up when 4 stations operate.												
4 Memory function indicator (Yellow)	Lights up when using memory function. Blinks when connecting a sensor amplifier whose set contents are different from the ones that are storing in this product.												
5 Setting extension key (Note 3)	Used for memory function (Note 1), teaching and light intensity adjustment (Note 2). Also, used for selecting the number of occupied stations (1 / 4 stations) and canceling communication error.												
6 Baud rate setting switch (Note 3) (Factory setting is 0)	To set baud rate of CC-Link. (Other than the following Nos.: Error) 0: 156kbps 3: 5Mbps 1: 625kbps 4: 10Mbps 2: 2.5Mbps												
7 Station No. setting switch (Ones digit) (Note 3) (Factory setting is 1)	To set station No. of CC-Link. Setting is possible in the range of 1 to 64 (0 / 65 or more: Error)												
8 Station No. setting switch (Tens digit) (Note 3) (Factory setting is 0)													
9 Connector for power supply (Allowable passing current: 6A)	<p>Upper side (For cascade wiring) Bottom side (For main wiring)</p> <p>Each vertical terminal is internally connected</p> <table border="1"> <tr> <th>Terminal No.</th> <th>Description</th> </tr> <tr> <td>1 / 6</td> <td>Auxiliary terminal 1</td> </tr> <tr> <td>2 / 7</td> <td>Auxiliary terminal 2</td> </tr> <tr> <td>3 / 8</td> <td>F.G.</td> </tr> <tr> <td>4 / 9</td> <td>24V</td> </tr> <tr> <td>5 / 10</td> <td>0V</td> </tr> </table>	Terminal No.	Description	1 / 6	Auxiliary terminal 1	2 / 7	Auxiliary terminal 2	3 / 8	F.G.	4 / 9	24V	5 / 10	0V
Terminal No.	Description												
1 / 6	Auxiliary terminal 1												
2 / 7	Auxiliary terminal 2												
3 / 8	F.G.												
4 / 9	24V												
5 / 10	0V												
10 RD indicator (Green)	Displays receiving state of CC-Link data. Lights up while receiving the data.												
11 SD indicator (Green)	Displays sending state of CC-Link data. Lights up while sending the data.												
12 L ERR. indicator (Red)	Lights up or blinks when an error occurs in CC-Link.												
13 L RUN indicator (Green)	Displays communication state of CC-Link. Lights up when connecting to the network.												
14 Connector for CC-Link	<table border="1"> <tr> <th>Terminal No.</th> <th>Description</th> </tr> <tr> <td>1</td> <td>DA connecting terminal</td> </tr> <tr> <td>2</td> <td>DB connecting terminal</td> </tr> <tr> <td>3</td> <td>DC connecting terminal</td> </tr> <tr> <td>4</td> <td>SLD connecting terminal</td> </tr> </table> <p>2 systems for cascade wiring</p>	Terminal No.	Description	1	DA connecting terminal	2	DB connecting terminal	3	DC connecting terminal	4	SLD connecting terminal		
Terminal No.	Description												
1	DA connecting terminal												
2	DB connecting terminal												
3	DC connecting terminal												
4	SLD connecting terminal												

Notes: 1) In case using the memory function, SC-GU3-EU is required. Refer to "Communication Command Specification" for detail of memory function.
2) For the teaching and memory function, refer to "Communication Command Specification".
3) For changing the setting, use a flathead screwdriver etc.

Thank you very much for purchasing Panasonic products. Read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

WARNING


- Never use this product in a device for personnel protection.
- In case of using devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

Designation	Function																						
Parallel output connector (with cover)	<p>CN-M20-C2 (optional) For detail, refer to "product Specification" or <Recommended product> Housing 503149-2000 Terminal 503429-0000 (AXG 26-30) [MOLEX Japan co. Ltd.]</p> <table border="1"> <tr> <th>Description</th> <th>Description</th> </tr> <tr> <td>1 Signal 0 Output info for 1ch amplifier</td> <td>11 Signal 10 Output info for 11ch amplifier</td> </tr> <tr> <td>2 Signal 1 Output info for 2ch amplifier</td> <td>12 Signal 11 Output info for 12ch amplifier</td> </tr> <tr> <td>3 Signal 2 Output info for 3ch amplifier</td> <td>13 Signal 12 Output info for 13ch amplifier</td> </tr> <tr> <td>4 Signal 3 Output info for 4ch amplifier</td> <td>14 Signal 13 Output info for 14ch amplifier</td> </tr> <tr> <td>5 Signal 4 Output info for 5ch amplifier</td> <td>15 Signal 14 Output info for 15ch amplifier</td> </tr> <tr> <td>6 Signal 5 Output info for 6ch amplifier</td> <td>16 Signal 15 Output info for 16ch amplifier</td> </tr> <tr> <td>7 Signal 6 Output info for 7ch amplifier</td> <td>17 Open Not used</td> </tr> <tr> <td>8 Signal 7 Output info for 8ch amplifier</td> <td>18 Open Not used</td> </tr> <tr> <td>9 Signal 8 Output info for 9ch amplifier</td> <td>19 24V 24V</td> </tr> <tr> <td>10 Signal 9 Output info for 10ch amplifier</td> <td>20 24V 24V</td> </tr> </table>	Description	Description	1 Signal 0 Output info for 1ch amplifier	11 Signal 10 Output info for 11ch amplifier	2 Signal 1 Output info for 2ch amplifier	12 Signal 11 Output info for 12ch amplifier	3 Signal 2 Output info for 3ch amplifier	13 Signal 12 Output info for 13ch amplifier	4 Signal 3 Output info for 4ch amplifier	14 Signal 13 Output info for 14ch amplifier	5 Signal 4 Output info for 5ch amplifier	15 Signal 14 Output info for 15ch amplifier	6 Signal 5 Output info for 6ch amplifier	16 Signal 15 Output info for 16ch amplifier	7 Signal 6 Output info for 7ch amplifier	17 Open Not used	8 Signal 7 Output info for 8ch amplifier	18 Open Not used	9 Signal 8 Output info for 9ch amplifier	19 24V 24V	10 Signal 9 Output info for 10ch amplifier	20 24V 24V
	Description	Description																					
	1 Signal 0 Output info for 1ch amplifier	11 Signal 10 Output info for 11ch amplifier																					
	2 Signal 1 Output info for 2ch amplifier	12 Signal 11 Output info for 12ch amplifier																					
	3 Signal 2 Output info for 3ch amplifier	13 Signal 12 Output info for 13ch amplifier																					
	4 Signal 3 Output info for 4ch amplifier	14 Signal 13 Output info for 14ch amplifier																					
	5 Signal 4 Output info for 5ch amplifier	15 Signal 14 Output info for 15ch amplifier																					
	6 Signal 5 Output info for 6ch amplifier	16 Signal 15 Output info for 16ch amplifier																					
	7 Signal 6 Output info for 7ch amplifier	17 Open Not used																					
	8 Signal 7 Output info for 8ch amplifier	18 Open Not used																					
	9 Signal 8 Output info for 9ch amplifier	19 24V 24V																					
10 Signal 9 Output info for 10ch amplifier	20 24V 24V																						

4 MOUNTING AND CONNECTION

How to mount


- Fit the rear part of the mounting section of the unit on a DIN rail.
- Press down the rear part of the mounting section of the unit on the DIN rail and fit the front part of the mounting section to the DIN rail.

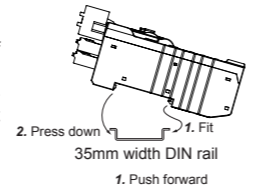

How to remove

- Push the unit forward.
- Lift up the front part of the unit to remove it.


Note: Take care that if the front part is lifted without pushing the unit forward, the hook on the rear portion of the mounting section is likely to break.





How to connect

- Be sure that the power supply is OFF while adding / removing units.
- When the units are mounted in cascade, mount the end plates **MS-DIN-E** (optional) at the both ends of the units to hold them between the flat sides of the plates.
- Up to maximum 16 sensor amplifiers can be connected in cascade. (In case of **FX-500**, up to maximum 12 sensor amplifiers can be connected in cascade.)
- In case two different models of sensor amplifier are mounted in cascade, be sure to mount identical models together.
- For the cautions of the sensor amplifiers, refer to the instruction manuals enclosed with the amplifiers.


- Mount communication unit **SC-GU3-01** on DIN rail. When mounting, remove the end connector cap which is attached to the connector area.
- Mount cascading connector unit **SC-71** (optional) one by one on the DIN rail. And slide them to side of **SC-GU3-01**.
- Insert sensor amplifiers (Optional) to **SC-71**.

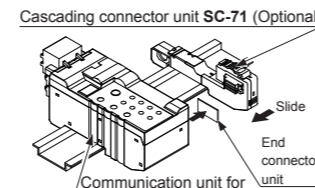


- Insert sensor amplifiers (Optional) to **SC-71**.
- Attach the end connector cap which is removed in the step 1 to the connector area for cascading of the last unit. In case using end unit **SC-GU3-EU** (optional), mount **SC-GU3-EU** on DIN rail. And slide it to side of the sensor amplifiers.

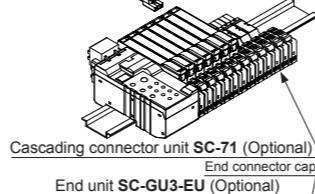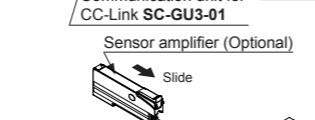

- Mount the end plates **MS-DIN-E** (optional) at both ends to hold the amplifiers between their flat sides.

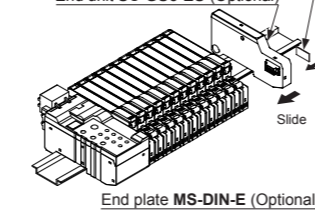


- Tighten the screws of **MS-DIN-E** to fix the end plates.

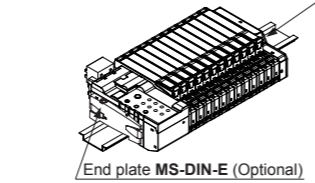

How to remove sensor amplifiers

- Press down release lever of **SC-71** and pull out the sensor amplifier. (Note) In state of cascading, the sensor amplifiers can be pulled out.

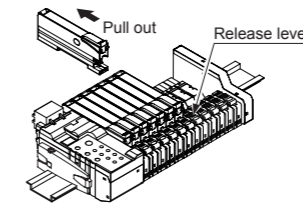

Note: Be sure that the release lever is broken without pressing down release lever when pulling out the sensor amplifiers. Do not use the cascading connector unit that the release lever is broken.

How to remove units

- Loosen screws of **MS-DIN-E**.
- Remove **MS-DIN-E**.
- Slide **SC-71** to disconnect the connection.
- Remove each units.

5 SELECTION OF NUMBER OF OCCUPIED STATIONS (1 / 4 STATIONS)

- In case of using the end unit **SC-GU3-EU** (optional), if the number of occupied stations is set to 4 stations, the control can be easily done.
- In case of not using the **SC-GU3-EU**, to set the number of occupied stations to 1 station is recommended.

Selecting procedures

- Turn ON the power while pressing the setting extension key.
- In case the number of occupied stations is set to 4 stations, the 4 stations operation indicator (green) lights up. In case the number of occupied stations is set to 1 station, the 4 stations operation indicator (green) turns OFF.
- After confirming the switching of the number of stations, turn OFF the power once, then turn ON the power again.

6 MEMORY FUNCTION

- Memory function can be used only when connecting the optically communicable sensor amplifier (**FX-500** series, **LS-403** or **DPS-400** series) and the end unit **SC-GU3-EU** (optional).
- This function enables to store the set contents of connected sensor amplifiers in the communication unit **SC-GU3-01** by each channel and send the stored contents to newly connected sensor amplifiers by each channel.

When storing set contents

- Turn ON the power in the condition that the sensor amplifiers are connected to **SC-GU3-01**.
- Storing starts after pressing the setting extension key down for approx. 2 sec.
- When the storing to **SC-GU3-01** is complete, the memory function indicator (yellow) lights up.

Note: To cancel the memory function, press the setting extension key for approx. 2 sec. again.


When sending the stored set contents

- Turn OFF the power of **SC-GU3-01**.
- Remove the sensor amplifiers that are connected to **SC-GU3-01** and mount new sensor amplifiers to which the set contents are transmitted to **SC-71**.
- When turning ON the power of **SC-GU3-01**, memory function indicator (yellow) blinks. However, if the setting contents of the connected sensor amplifiers are same as the one that are stored in **SC-GU3-01**, it lights up.
- When pressing the setting extension key, transmission of the set contents is started. (Note)
- When the transmission is complete, the memory function indicator (yellow) turns to light up from blinking.

7 CONNECTION WITH UPPER COMMUNICATION

- Make sure that the power is OFF while wiring.
- Be sure to use the specified communication cable.
- The communication distance should be within the specification.

- When connecting to the terminal block, insert a solid wire or twisted wire (lead wire) with a ferrule (sleeve) terminal (please arrange separately) into the hole as shown in the figure at the right. The wire is locked when it is properly inserted. However, do not pull the wire with excessive force, as this can cause a cable break.
- When connecting the twisted wire (lead wire) without a ferrule (sleeve), insert the wire to the innermost of the connecting hole while pressing the release button.
- When releasing the solid wire or the twisted wire (lead wire), pull the wire while pressing the release button.
- The following solid wire and twisted wire (lead wire) are recommended.
Power supply line side: 0.2 to 1.0mm² (AWG 24 to 16)
CC-Link line side: 0.2 to 2.5mm² (AWG 24 to 12)
- Use the CC-Link-specified cable (shielded twist-pair cable). Make sure to ground the shielded cable.
- When mounting the CC-Link connector, the tightening torque should be 0.2N·m or less.

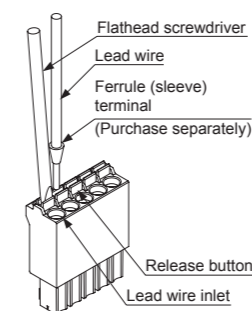

8 ERROR INDICATOR

In case of errors, attempt the following measures.

Indicator	State	Cause	Corrective action
Error indicator (Red)	Lights up	CC-Link communication shuts down.	Check that the CC-Link connector is connected.
	Blinks	Optical communication is not correctly performed.	Check the connection status of the connected sensor amplifiers or sensor unit. Check the optical communication command and the transmitted data. For details, refer to "Product Specification" or "Communication Command Specification."
L ERR. indicator (Red)	Lights up	Baud rate or station No. is not correctly set.	Check that the baud rate and station No. setting are within the specification. For setting method, refer to "FUNCTIONAL DESCRIPTION."
	Blinks	Baud rate or station No. setting has been changed since the power-ON.	Restore the baud rate and station No. setting to the state when power-ON, or turn ON the power again.

9 SPECIFICATIONS

Communication unit for CC-Link SC-GU3-01

Designation	Communication unit for CC-Link
Model No.	SC-GU3-01
Applicable sensor amplifier	Sensor amplifier (NPN output type) that can connect the cascading connector SC-71 (optional)
Number of connectable units	Max. 16 units per 1 of SC-GU3-01 (Max. 12 units for FX-500 series)
Supply voltage	24V DC ±10% Ripple P-P10% or less
Current consumption	120mA or less (excluding connected sensor amplifiers, etc.)
Allowable passing current (Note)	Total: 2A or less
Communication method	CC-Link Ver. 1.10
Number of occupied stations	Switchable 1 / 4 stations
Baud rate	156kbps, 625kbps, 2.5Mbps, 5Mbps, 10Mbps (Set at SC-GU3-01)
Station No. setting	1 to 64 (0 / 65 or more: Error)
Remote station type	Remote device station
Ambient temperature	-10 to +55°C (if 4 to 7 units are connected in cascade: -10 to +50°C, if 8 to 16 units are connected in cascade: -10 to +45°C) (No dew condensation or icing allowed). Storage: -20 to +70°C
Ambient humidity	35 to 85% RH, Storage: 35 to 85% RH
Material	Enclosure: Polycarbonate
Weight	Approx. 80g

Note: It is the value that can supply to **SC-GU3-01** or the sensor units connected to **SC-GU3-01**, etc.

End unit SC-GU3-EU

Designation	End unit
Model No.	SC-GU3-EU
Applicable sensor amplifier	<ul style="list-style-type: none"> Communication unit for CC-Link SC-GU3-01 Between SC-GU3-01 to SC-GU3-EU: FX-500 series, LS-400 series etc.
Number of connectable units	1 unit for 1 of SC-GU3-01
Supply voltage	24V DC ±10% Ripple P-P10% or less
Current consumption	25mA or less
Ambient temperature	-10 to +55°C (if 4 to 7 units are connected in cascade: -10 to +50°C, if 8 to 16 units are connected in cascade: -10 to +45°C) (No dew condensation or icing allowed). Storage: -20 to +70°C
Ambient humidity	35 to 85% RH, Storage: 35 to 85% RH
Material	Enclosure: Polycarbonate
Weight	Approx. 20g

Cascading connector unit SC-71

Designation	Cascading connector unit
Model No.	SC-71
Applicable sensor amplifier	<ul style="list-style-type: none"> Communication unit for CC-Link SC-GU3-01 Communication end unit SC-GU3-EU Between SC-GU3-01 to SC-GU3-EU: FX-500 series, LS-400 series etc.
Number of connectable units	Max. 16 units per 1 of SC-GU3-01 (Max. 12 units for FX-500 series)
Ambient temperature	-10 to +55°C (if 4 to 7 units are connected in cascade: -10 to +50°C, if 8 to 16 units are connected in cascade: -10 to +45°C) (No dew condensation or icing allowed). Storage: -20 to +70°C
Ambient humidity	35 to 85% RH, Storage: 35 to 85% RH
Material	Enclosure: Polycarbonate, Metal plate: aluminum
Weight	Approx. 10g

10 CAUTIONS

- This product has been developed / produced for industrial use only.
- Make sure that the power supply is OFF while wiring and adding the units.
- Take care that wrong wiring will damage the product.
- Verify that the supply voltage variation is within the rating including the sensor amplifier.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Do not use during the initial transient time (1 sec.) after the power supply is switched on.
- This product is suitable for indoor use only.
- This product cannot be used in an environment containing inflammable or explosive gases.
- Never disassemble or modify the product.
- For details of CC-Link, refer to "CC-Link Manual" prepared by Mitsubishi Electric Corporation.
- Any protective devices or safety circuits against system malfunction should be designed to be external to the system.
- In case the EMC Directive is to be satisfied with this product being incorporated into your system, install this product in a conducting box as per User's Manual (issued by Mitsubishi Electric Corporation) of the PLC.

Panasonic Electric Works SUNX Co., Ltd.

http://panasonic-electric-works.net/sunx
Overseas Sales Division (Head Office)
 2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan
 Phone: +81-568-33-7861 FAX: +81-568-33-8591
Europe Headquarter: Panasonic Electric Works Europe AG
 Rudolf-Diesel-Ring 2, D-83607 Holzkirchen, Germany
 Phone: +49-8024-648-0
US Headquarter: Panasonic Electric Works Corporation of America
 629 Central Avenue New Providence, New Jersey 07974 USA
 Phone: +1-908-464-3550
 PRINTED IN JAPAN